

# 12ft. Premier Raised Bed Instructions

**N.B:** The illustrations show a Premier 14 inch high bed being assembled. The 7, 9, 14 and 21 inch high beds use the same procedure with the appropriate single, double or triple tier construction.

**7 INCH HIGH FLAT PACK CONTAINS:** 4no. 18cm high treated timber side planks.

4no. 18cm high treated timber end planks, 8no. 6 x 6 x 18cm treated timber fixing posts. 40 screws.

**9 INCH HIGH FLAT PACK CONTAINS:** 4no. 23cm high treated timber side planks.

4no. 23cm high treated timber end planks, 8no. 6 x 6 x 23cm treated timber fixing posts. 56 screws.


**14 INCH HIGH FLAT PACK CONTAINS:** 8no. 18cm high treated timber side planks.

8no. 18cm high treated timber end planks, 8no. 6 x 6 x 36cm treated timber fixing posts. 72 screws.


**21 INCH HIGH FLAT PACK CONTAINS:** 12no. 18cm high treated timber side planks.

12no. 18cm high treated timber end planks, 8no. 6 x 6 x 54cm treated timber fixing posts. 102 screws.


Place the two shorter end planks face down with the corner fixing posts underneath as shown. Take care to align post neatly with the end of the board. Fix with 4 screws provided using a screw gun or screwdriver. (Fig 1)  
N.B. Avoid placing the screw too near to the edge of the timber to prevent splitting.

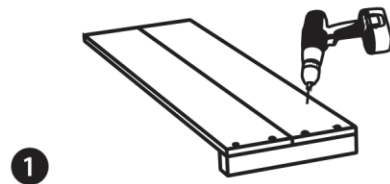


Repeat step 1 with the other ends, fixing the corner post to each end. You should now have 2 pieces as pictured opposite. (Fig 2)

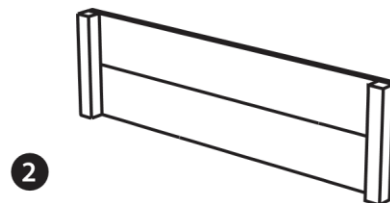

Fix a longer side board to the corner post as shown ensuring the end of the board sits neatly with the edge of post. (Fig 3)  
Fix a second board above the first to complete the corner. (Fig 4)  
Continue this process until all four corners are secure.

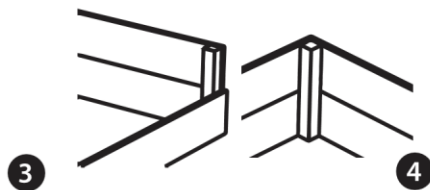

Your Quickcrop raised bed should now look like the illustration opposite (Fig 5)

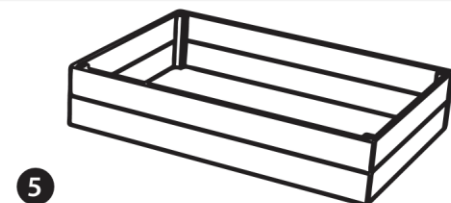

Place the two 6x4 beds together end to end and fix in place using the screws provided.

